



This manual is for reference and historical purposes, all rights reserved.

This page is copyright© by M. Butkus, NJ.

This page may not be sold or distributed without the expressed permission of the producer

I have no connection with any camera company

On-line camera manual library

This is the full text and images from the manual. This may take 3 full minutes for the PDF file to download.


If you find this manual useful, how about a donation of \$3 to: M. Butkus, 29 Lake Ave., High Bridge, NJ 08829-1701 and send your e-mail address so I can thank you. Most other places would charge you \$7.50 for a electronic copy or \$18.00 for a hard to read Xerox copy.

This will allow me to continue to buy new manuals and pay their shipping costs.

It'll make you feel better, won't it?

**If you use Pay Pal or wish to use your credit card,
click on the secure site on my main page.**

MINOLTA XG-9

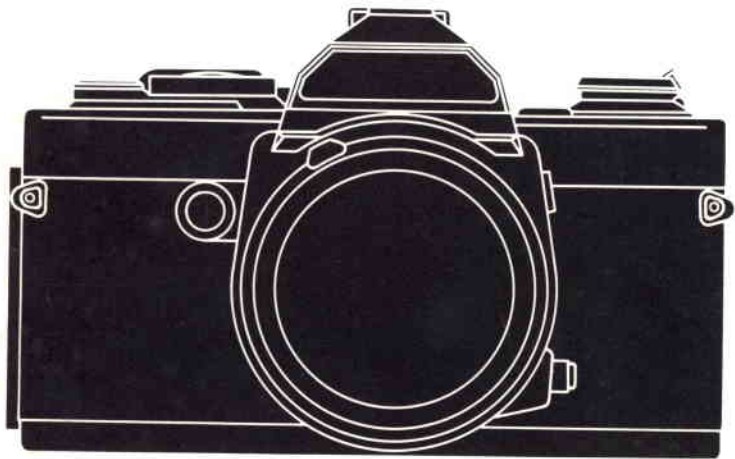

OWNER'S MANUAL



Your light, compact XG-9 is a top-quality single-lens reflex camera whose electronic system will control exposure for you automatically, freeing you for more enjoyment and greater creativity. You can also override the meter's automatic setting or set the camera for full manual operation. The aperture selected and LED auto-set speed are clearly displayed in the XG-9's total information viewfinder and its advanced acute matte screen makes viewing brighter and focusing easier and more accurate. Electromagnetic shutter release and unique "touch switch" metering head a host of other features. Attaching the accessory Auto Winder G enables single-frame/continuous motor film advance up to 2 frames/sec. Minolta's special Auto Electroflash 132X and 200X electronically switch the XG-9's shutter over for strobe exposures when charged and signal flash-ready in finder; the 200X also enables continuous-sequence flash with the winder. Besides MD lenses, your XG-9 uses virtually all interchangeable Minolta lenses to date and all applicable Minolta SLR system accessories.

Before using your camera for the first time, study this manual carefully all the way through — or at least all the sections needed to cover your own photographic needs. As you read, attach a lens to the camera body (see p. 10), load batteries, and handle your XG-9 and acquaint yourself with its parts and features. Then load it with film and proceed to actual picture taking. In this way, you can take good photos and begin to realize the broad potential of your XG-9 right from the start. Be sure to keep this manual for reference later as necessary.

CONTENTS

MAIN FEATURES	4	EXPOSURE CONTROL	
NAMES OF PARTS	6	FUNDAMENTALS	20
SUMMARY OF OPERATION		METERING WITH THE XG-9	21
(Automatic)	8	VIEWFINDER	22
ATTACHING AND REMOVING LENSES	10	AUTOMATIC EXPOSURE CONTROL ...	24
BATTERIES AND POWER	11	Automatic operation	24
Installing batteries	11	Eyepiece cap	25
Testing batteries	12	WAYS OF USING AUTO MODE	26
Main switch	13	General use	26
Touch switch/operating button	13	Creative aperture control	27
Cold-weather operation	14	Creative shutter control	28
LOADING AND ADVANCING FILM	14	AUTOMATIC EXPOSURE	
Film advance lever and frame counter ...	17	ADJUSTMENT	29
FILM SPEED	18	WHEN AND HOW MUCH TO ADJUST	
Setting filmspeed	18	EXPOSURE	30
ASA/DIN conversion scale	19	MANUAL EXPOSURE CONTROL	32
Memo holder	19	"B" setting	33

HOLDING THE CAMERA	34	XG-9 SYSTEM ACCESSORIES	45
FOCUSING	35	Auto Winder G	45
Depth of field	36	Auto Electroflash 200X and 132X	46
Depth-of-field scale	36	Remote Cord S and L	47
Infrared index	37	Data Back G	48
RELEASING THE SHUTTER	38	STANDARD-LENS SPECIFICATIONS ...	49
SELF-TIMER	40	CAMERA SPECIFICATIONS	50
REWINDING AND UNLOADING		CARE AND STORAGE	52
FILM	41		
FLASH PHOTOGRAPHY	43		
Synchronization	43		
Connecting flash units	43		
USING OTHER THAN MD OR			
MC LENSES	44		
Auto Rokkor lenses	44		
RF (mirror-type) and Manual-Preset			
lenses	44		

MAIN FEATURES

Fail-safe electronic exposure system

Incorporating many of the features developed for Minolta's top electronic cameras, the XG-9 covers a wide range of photographic conditions. Its electronic shutter which automatically locks to prevent overexposure and electromagnetic shutter release with unique touch switch metering add to the handling ease of the camera.

The XG-9's system features:

- Full automatic exposure by stepless shutter speeds from 1/1000 to 1 sec. plus full manual settings.
- Electromagnetic shutter release.
- Unique "Touch switch" metering.
- Two tiny silver-oxide batteries as power source.
- Electromagnetic shutter release that locks to prevent overexposure when light over meter's range or battery power low.

Solid-state information viewfinder

- Special focusing screen has split-image and microprism focusing aids, plus scientifically developed new type of matte field that is up to 50% brighter than conventional matte screens.
- Aperture set for automatic and manual modes visible in the finder.
- LED's indicate automatic shutter speed selection and over-/under-range warning.
- LED and "60" position blinks as flash-ready signal when either Auto Electroflash 200X or 132X is attached and charged.

Easy handling controls

Lightweight and compact, the XG-9 is human engineered to fit the user's hands for smooth operation:

- Smooth short stroke film advance.
- Large easy to adjust shutter-speed dial.
- "Soft-touch" electromagnetic shutter release.
- Minolta bayonet lens mount with large release button.

- Balanced winder operation.
- Easy-to-use depth-of-field preview button.

Quick attach auto winder

The XG's accessory auto winder attaches quickly, without access caps to remove or store, freeing the user from advancing film in single-frame or continuous operation up to two frames per second. Its strong efficient coreless micromotor winds as many as 150 or more cartridges per set or charge of batteries. At the end of each cartridge the motor automatically shuts off.

Special camera-control flash units


When attached to the XG-9 and ready to fire, both the Auto Electroflash 200X and 132X start a flash-ready signal blinking in the viewfinder and automatically set the shutter for X-synchronization (1/60 sec.) when the shutter is released. The Auto Electroflash 132X features two auto settings as well as manual and a tiltable flash head for bounce flash. Its special flash distance check lamp lights to indicate when flash brightness is sufficient for correct exposure. The 200X model provides auto flash at either of two apertures and either full-power


manual operation or when powered by Ni-Cd batteries, up to two continuous-sequence flash exposures each second with the Auto Winder G.

User oriented features

- Up to two stops' continuous adjustment over or under the normal electronic setting.
- X-type flash synchronization through the hot shoe or PC terminal.
- Electronic self-timer with blinking indicator light.
- Eyepiece cap for unmanned or similar operation.
- Exclusive Safe Load Signal monitors film alignment and advance.
- Handy memo holder and ASA/DIN conversion scale on back.
- Release terminal for tripod shots with electronic or standard release cord.
- Shutter not operative when operation switch off.
- Virtually all existing Minolta interchangeable lenses and applicable system accessories can be used in either automatic or manual operation.

NAMES OF PARTS

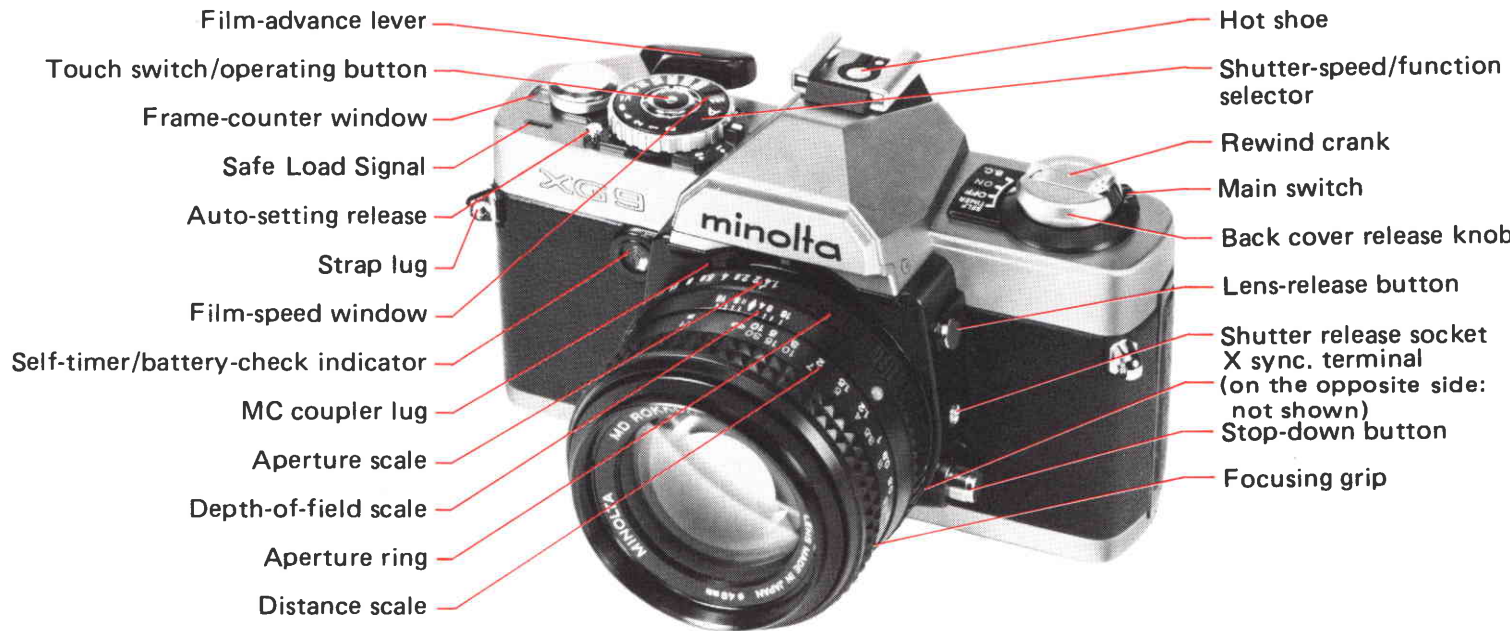


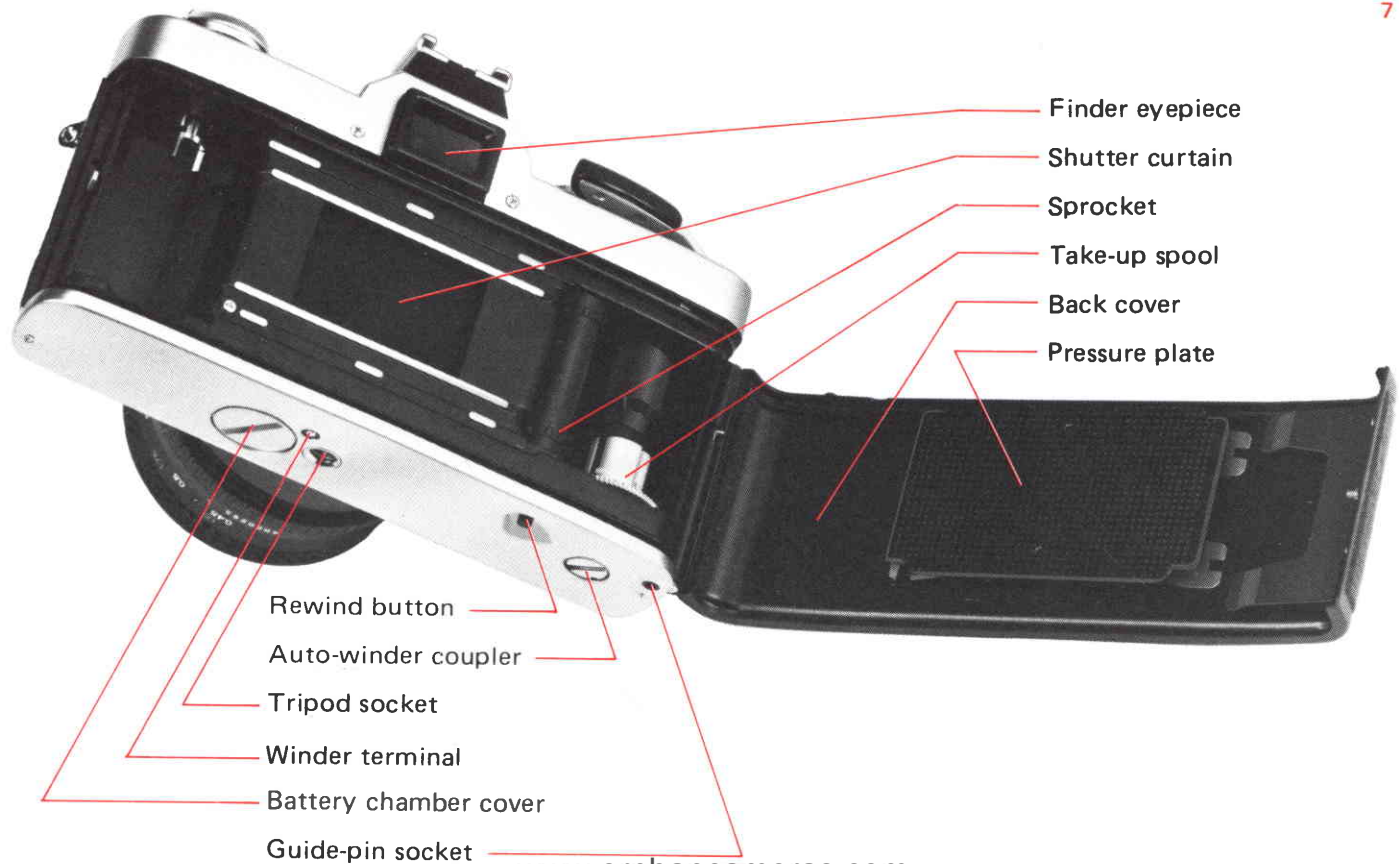


SUMMARY OF OPERATION (Automatic)

The steps pictured on this page outline use of your XG-9 on automatic mode. They give a general idea of how very easy it is to get

perfectly exposed pictures with this camera and are keyed to corresponding sections of the manual for ready reference. This brief guide

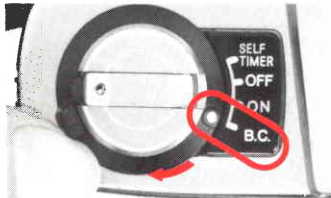


1. Check batteries (see p. 12)

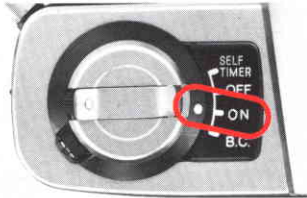

2. Move main switch to "ON" (p. 13)



3. Open back cover (p. 14)

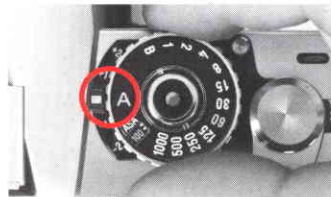

7. Set selector dial to "A" (p. 24)




8. Set lens aperture (p. 24)



9. Adjust focus (p. 35)

may also be useful for good results after you have not used the camera for some time. It is not, however, a substitute for the detailed


instructions in the rest of this manual, which should be thoroughly studied for best results.

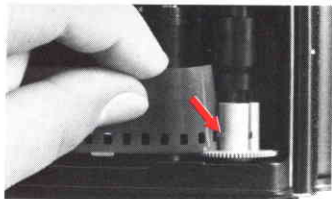

4. Load film properly; close cover (p. 14)




5. Advance film to "1" (p. 17)

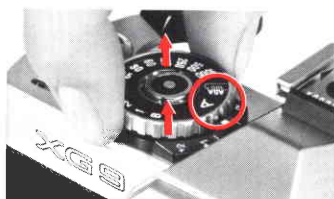

6. Set film speed (p. 18)



10. Release shutter (p. 38)

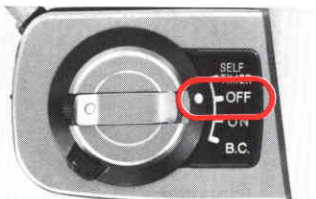

11. Turn power "OFF" (p. 13)




12. Rewind and remove film (p. 41)

ATTACHING AND REMOVING LENSES

To Attach

1. Remove the body cap from the camera lens mount and the rear cap from the lens bayonet, each by turning the cap counterclockwise.
2. Align the red mounting index on the lens barrel with the red index above the camera lens mount; insert the lens bayonet into the mount; and turn the lens clockwise until it locks into place with a click.

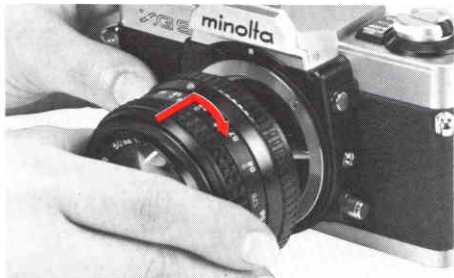


To Remove

While pushing the lens-release button, turn the lens counterclockwise as far as it will go; then lift the lens bayonet out of the mount.

CAUTION

If it becomes necessary to set the lens down without a rear lens cap attached, be sure to set the lens only on its front end (except for fisheye lenses) as damage to the diaphragm control pin could result from rear lens contact with a hard surface.

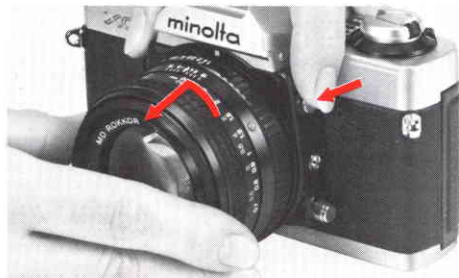

Two 1.5-volt silver-oxide batteries, Eveready S-76 or equivalent, supply the power for the meter, electronic exposure control, electromagnetic release, electronic shutter settings, and LED indication.

CAUTION


- The shutter will not release when the operating button is pushed if: battery power is too low; the operating switch is at "OFF," exposure conditions exceed the range of the automatic exposure system.
- Do not use 1.3v mercury batteries, Eveready EPX-675 or equivalent, which have a similar shape.

NOTE


- If the camera is not be used for more than two weeks, it is advisable to remove the batteries.
- Fresh spare batteries may be stored in the battery holder provided with the camera strap.

Installing batteries

1. Using a coin or similar object, turn the battery-chamber cover counterclockwise and remove it.
2. After wiping terminals with a clean dry wiping cloth and handling only by the edges, insert two of the specified batteries plus (+) side out into the sleeve on the inside of the cover. (If batteries are inserted improperly, they will not make contact, and no current will flow.)

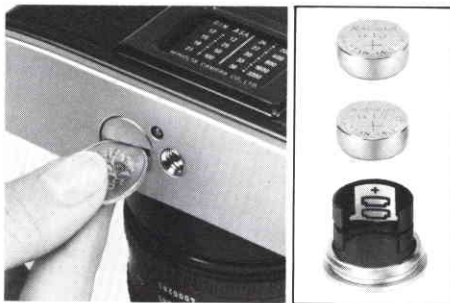

3. Replace the cover and screw it in clockwise as far as it will go.

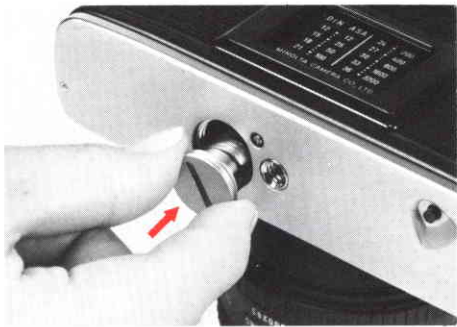

Testing batteries

Move the main switch to align the index with "B.C." If the red battery-check indicator on the front of the camera lights, batteries are serviceable. When released, the main switch will automatically move to the "ON" position.

Test batteries immediately after installing them. If the indicator does not light, make sure that they are fresh and have been inserted correctly.


Batteries should be tested from time to time thereafter, preferably before starting each new roll of film and particularly before starting picture-taking sessions or trips. A set of batteries will generally last for about one year in proper normal use.



Main switch


To operate the camera, move the main switch to "ON." This allows current to flow to the Touch switch/operating button. The main switch also serves as the self-timer and battery check switch.

To prevent accidental exposures and needless battery drain, always be sure to move the main switch to "OFF" when not using the camera.

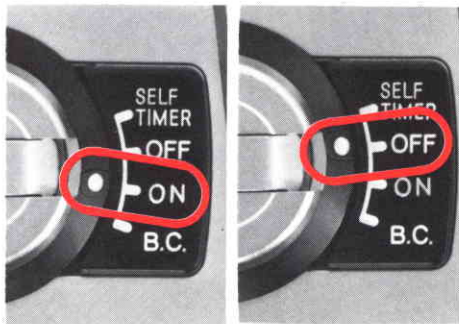

Touch switch/operating button

Finger contact with the Touch switch/operating button activates the camera's electronic circuit and when the shutter-speed/function selector is set at "A" (automatic), powers the electronic exposure control and LED circuits. If proper contact with the touch switch is not possible (i.e., while wearing gloves or when fingers are dry), slight pressure on the button will also activate the camera.

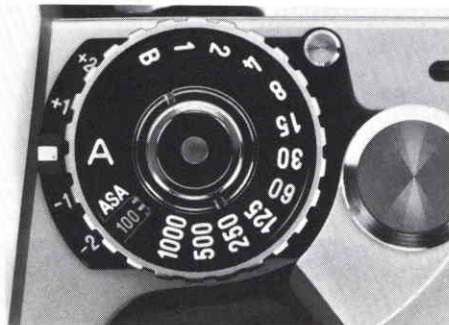

NOTE

Wipe off any dust or dirt that might accumulate on the touch switch with a clean dry cloth. This will insure good contact and proper operation.

Cold-weather operation

Batteries by nature tend to decrease in capacity as the temperature goes down. Though the silver-oxide batteries used for the XG-9 are superior to most others in this respect, it also happens with them.

If old batteries are used at temperature below 0°C (32°F), the camera's electronic operation may not be satisfactory. You should thus replace older batteries with fresh ones before using your XG-9 in cold weather and carry spare fresh batteries with you during such use. Battery capacity will be restored to its normal level when the batteries are warmed to their recommended operating temperature range.


LOADING AND ADVANCING FILM

After you have not used your camera for some time, check the Safe Load Signal and frame counter to be sure that there is no film in the camera. If the camera is unloaded proceed as follows:


1. Pull out on the back cover release knob until the camera back springs open.




2. Leaving the knob pulled out, position a film cartridge in the chamber with the projecting-spool end toward the bottom of the camera. Then push the back-cover release knob all the way in, rotating it slightly to do so if necessary.

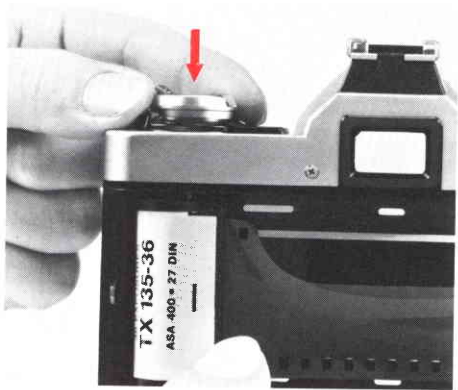

3. Insert the end of the film leader as shown into one of the slots in the take-up spool so that the tooth is engaged with a sprocket hold near the end of the leader. Make sure that the end of the leader does not project from another slot between tabs on the spool.

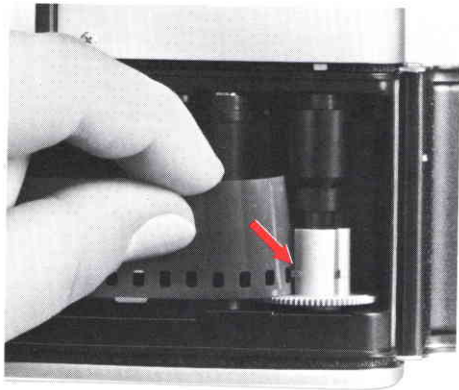


4. With the shutter speed function selector on manual setting, operate the film-advance lever slowly until the film has begun to wind firmly around the take-up spool and the sprocket teeth are engaged with holes on both edges of the film. If the advance lever stops at the end of a full stroke during this procedure, release the shutter and continue.

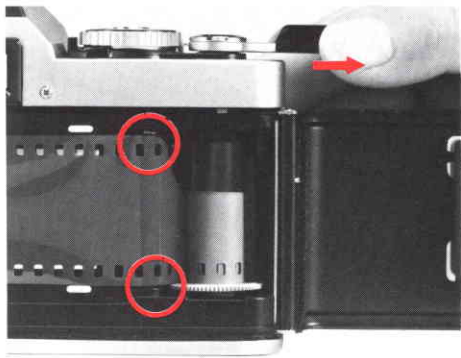

5. Close the camera back and push in on it until it clicks loaded.
6. A red "S" should now appear opposite the index in the frame-counter window. Advance film and release the shutter until the index points to "1" on the frame-counter dial.



7. A red bar should also now appear at the extreme left in the Safe Load Signal window. This indicates that the film is loaded and winding properly on the take-up spool. If the Safe Load Signal does not appear or swings far to the right in the window, repeat steps 1 through 6 to assure that film is properly engaged on the spool. As you continue to take pictures, the red signal will move gradually toward the right in the window, indicating that film is advancing properly.

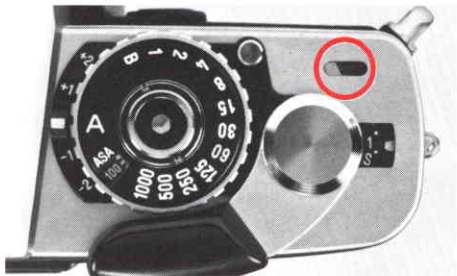


CAUTION

Film should be handled and loading done in subdued light — at least shaded from direct sunlight by the body.


Film-advance lever and frame counter

The film-advance lever is designed with 30° unengaged movement before the beginning of its engaged stroke to allow swinging it out from the body so that the right thumb will fit comfortably behind it. Continuing to move the lever until it stops, an angle of 130°, advances film and frame counter and cocks the shutter for the next exposure.

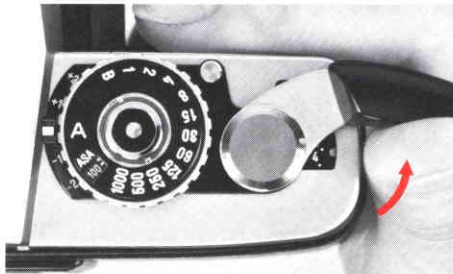

When the lever stops and resists further movement at the end of a film, never attempt to force it farther. (see p. 41 for instructions on rewinding and unloading film.)

The counter automatically resets for film loading when the camera back is opened.

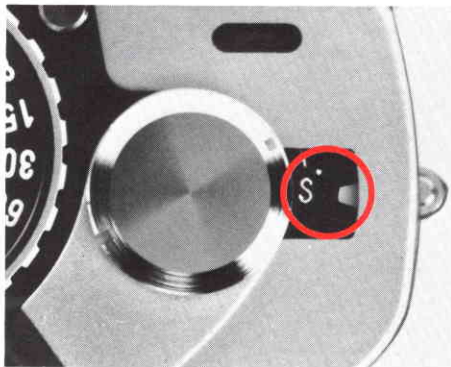


FILM SPEED

Each film on the market has an ASA or DIN exposure-index number to indicate its sensitivity to light. For correct exposure, the meter must be set for the effective exposure index of the film in use.

Setting film speed

To do this, lift up on the knurled ring of the shutter-speed/function selector and turn it until

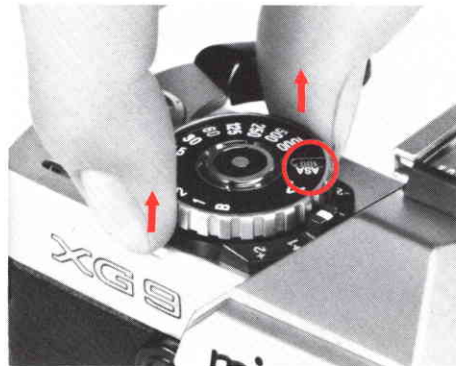

the proper ASA indication appears centered in the film-speed window and locks in that position when the ring is released. Marks between numbered graduations indicate ASA numbers as shown in the ASA/DIN conversion scale below:


ASA		DIN	200		24
12		12	•	250	25
•	16	13	•	320	26
•	20	14	400		27
25		15	•	500	28
•	32	16	•	640	29
•	40	17	800		30
50		18	•	1000	31
•	64	19	•	1250	32
•	80	20	1600		33
100		21	•	2000	34
•	125	22	•	2500	35
•	160	23	3200		36

ASA/DIN conversion scale

A convenient scale for converting DIN to ASA film-speed ratings is located on the back cover of the camera.

Memo holder

Around the ASA/DIN conversion scale is a convenient frame that can be used to keep memos handy with the camera. It is just the right size to hold the film-box end, which can be inserted as a reminder of the film in use.

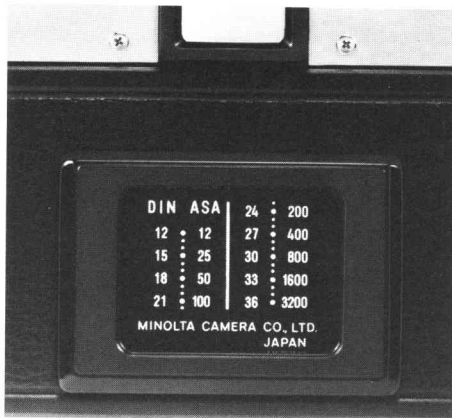

EXPOSURE-CONTROL FUNDAMENTALS

The two camera exposure-control settings are lens opening (aperture) and shutter speed. The size of the aperture determines the amount of volume of light reaching the film from a given subject and lighting. The shutter speed determines the length of time this light acts upon the film. Apertures are expressed in f-numbers, which are larger for small openings and vice versa (e.g., f/16 represents a small opening, f/2 a large one). Shutter speeds are expressed in seconds or fractions thereof, which are generally the reciprocals of the numbers shown on shutter-speed scales (e.g. 60 = 1/60 sec., and 2 = 1/2 sec.). At usual apertures, each f-numbers setting (e.g., f/8) lets in twice as much light as the next numerically larger one (f/11) and half as much as the next smaller (f/5.6). Similarly, each shutter speed (e.g., 1/60 sec.) allows light to strike the film twice as long

as the next higher speed (1/125) and half as long as the next lower one (1/30). The interval between two standard f-numbers (say, f/4 and f/5.6) or shutter speeds (say, 1/15 and 1/30) is one "stop." Total exposure on the film is determined by the combination of aperture and speed. Other things being equal, using the next smaller f-number (i.e., giving one stop more exposure) will balance using the next higher shutter speed (i.e., giving one stop less exposure), and so on. A great range of combinations (e.g., f/5.6 at 1/30, f/4 at 1/60, f/2.8 at 1/125, f/2 at 1/250, etc.) will thus yield the same total exposure. The specific combination you choose under given lighting conditions will depend upon the degree to which you want the greater depth of field (see p. 36) of smaller apertures and the greater movement-blur preventing ability of faster speeds (p. 28).

METERING WITH THE XG-9

(Automatic mode only)

The center weighted metering system in your XG-9 employs two CdS cells mounted behind the pentaprism so that light from all parts of the viewfield (picture area) is measured but influence from a broad central area is greatest. Thus the reading should yield satisfactory exposure without adjustment as long as the main subject area occupies a major part of the frame.

If the subject area to be measured occupies a relatively small part of the frame, move the camera so that the main subject fills most of the frame. Note the shutter speed setting in this position and compensate for the exposure difference with the shutter-speed/function selector or use manual speeds to set the same value when making the exposure from the original position. Further, if the most important area is very much brighter or darker than the rest of the frame and does not fill most of it, exposure should be decreased or increased

with the same control from 1/2 to 2 stops, the exact amount varying with the specific brightness difference and the effect desired. (p. 29).

As with most metering systems, strong sources of direct light or other very bright areas may influence the reading adversely if allowed to dominate the frame.


Though your XG-9 finder is designed to minimize the effect on the meter of light entering through the finder eyepiece under usual conditions, care must be exercised to prevent this especially if you wear glasses. Use of a rubber eyecup is further recommended when the subject is in shade and the camera is in sunlight, when bright sidelight falls between eye and eyepiece, or when stop-down metering is used, particularly at small apertures (see p. 44). When viewing is unnecessary, the eyepiece cap (see p. 25) can be used to completely eliminate this problem.

VIEWFINDER

As you look through the viewfinder of your XG-9, you can see:

- 1 Split-image/microprism focusing spot
- 2 Shutter speed scale
- 3 Indicator LED's (show shutter speed being set on auto mode; LED at "60" also blinks as flash-ready signal with X-series Auto Electro-flashes)
- 4 LED over- or under-range indicators (auto mode only)
- 5 F-number of lens aperture set

For operation details, see the following section on exposure control and focusing.

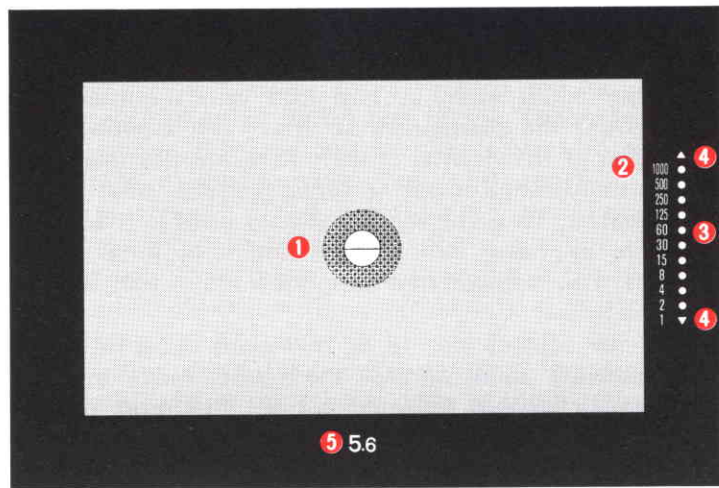




www.orphancameras.com

AUTOMATIC EXPOSURE CONTROL

Automatic operation

1. Turn the shutter-speed/function selector to align "A" with the index, at which point it is locked to prevent accidental movement.

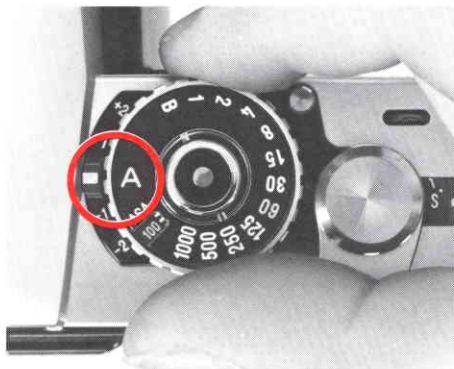

2. Set the lens opening by turning the aperture ring on the lens barrel. The f-number set will appear centered below the frame in the the finder, and the shutter speed as indicated by lighted LED at the right of the frame will vary automatically to yield proper exposure for the aperture and other settings with the light being metered.



3. It is then only necessary to confirm focus (see p. 35), compose your picture, and release the shutter (p. 38).
4. The XG's accurate range of shutter operation on automatic mode is 1/1000 to 1 sec., as indicated by the shutter speed scale. When the over-range indicator lights, the shutter will lock to prevent overexposure. Lighting of the under-range LED indicates use of a shutter speed longer than one second. For either, the aperture or other conditions should be adjusted so that an LED lights within the scale's range.


NOTE

- When the over-range indicator lights, be sure not to depress the operating button while adjusting the aperture or other conditions. This will cause the shutter to release at the instant the exposure is within metering range and result in an unwanted picture.
- To continuously provide more or less exposure on automatic mode, see p. 29.

Eyepiece cap

For remote or unmanned operation or when the camera is set on a support and used without viewing on automatic mode or manual speeds longer than 1 sec., be sure to attach the eyepiece cap as shown. This will prevent unwanted light from entering through the eyepiece and affecting the meter reading and exposure when the eyepiece is not being shielded by the photographer's head, as it normally would be.

The eyepiece cap has a slot that allows threading it on the camera strap to avoid loss and keep it handy for use.

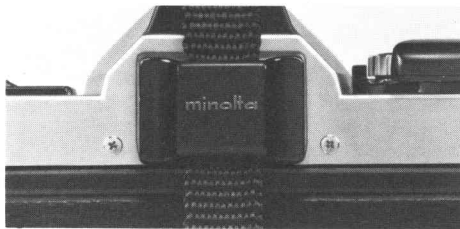

WAYS OF USING AUTO MODE

On AUTO mode, your XG-9 will set the precise shutter speed for proper exposure for you automatically. Even so, you have considerable control over results and can adjust, aperture and shutter speed over considerable ranges to suit the conditions and yourself.

General use

For usual good personal pictures with a minimum of care where no particular effect is desired, simply set the aperture as indicated in the table. These guide settings will provide as much depth of field (see p. 36) as possible while producing a shutter speed fast enough to stop any subject motion and guard against blur from camera movement (see p. 38).

Guide to setting aperture

	Sunny	Hazy Sun	Heavy Over-cast	Indoors
ASA 25	f/8	f/4	f/2	f/1.4
ASA 80	f/11	f/5.6	f/4	f/1.4
ASA 100	f/11	f/5.6	f/4	f/1.4
ASA 200	f/11	f/8	f/5.6	f/2
ASA 400	f/16	f/11	f/8	f/2.8

(These are only guidelines for typical picture taking situations. For additional information see page 20).

NOTE


Use of a steady support (p. 39) or an electronic flash (p. 43) is recommended for use with shutter speeds of 1/60 or slower.

Creative aperture control

There may be times when it will be most important to set the lens aperture to obtain a particular effect, such as rendering a certain range in sharp focus or emphasizing a subject against an out-of-focus background. In this case, set the desired aperture, and let the

camera select the shutter speed. Small f-numbers yield a shallow field of sharp focus, as in Example A below, while large f-numbers give greater depth of field, as in Example B. To determine actual depth of field, use the depth-of-field scale (see p. 36).

A: Large lens opening

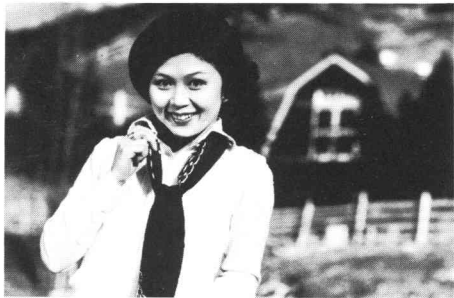


B: Small lens opening



Creative shutter control

At other times, the subject or effect you want may make the shutter speed more important. In this case, turn the aperture ring until the lighted LED indicates the required speed on the finder scale; exposure will automatically be correct. High shutter speeds such as 1/500 to 1/1000 sec. can "freeze" fast action, as in

C: High shutter speed

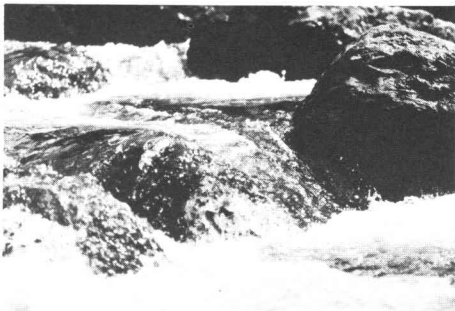

Example C below. Such slow speeds as 1/2 to 1 sec. can be used to emphasize subject flow or motion, as in Example D.

No matter how the camera is used, it is important to support it (see p. 34) and release the shutter properly (p. 38).

D: Low shutter speed



To deliberately give more or less exposure while in automatic mode, set the shutter-speed/function dial as follows:

Depress the Auto-setting release and move the shutter-speed/function selector so that the "A" is on the side having plus (+) numbers to produce more exposure or on the side having minus (-) numbers to produce less exposure. The numbers indicate the amount of adjustment in stops or EV steps (i.e., "+1" indicates one more stop or double the normal automatic exposure, and "+2" means two stops or four times more exposure: "-1" is one stop less or one half the exposure, and "-2" produces two stops' less or one quarter the normal exposure).




The shutter-speed/function selector will lock at normal automatic setting and there are click-stops at each half stop setting.

The "A" may be set at intermediate positions between +2 and -2.

Always return the shutter-speed/function selector to "A" (normal automatic operation) after using exposure adjustment settings.

NOTE

The XG's automatic exposure system will not operate when the "A" on the shutter-speed/function selector is moved outside the range of exposure adjustment.

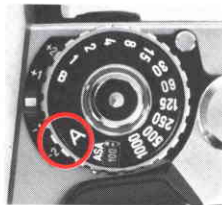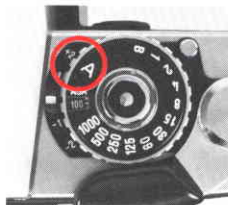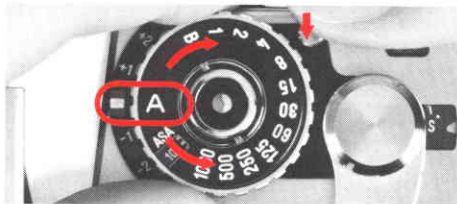

WHEN AND HOW MUCH TO ADJUST EXPOSURE

1. In situations where there is a great contrast difference between the subject and background and the most important area is considerably darker than the area surrounding it, set the "A" on the Shutter-speed/function Selector at from +1/2 to +2. Examples of such pictures are ones with strong backlighting and no fill-in illumina-

tion, such as Examples A and B, or subjects against a background of snow or light-colored sand, unless the bright area occupies a very small part of the image frame.

2. If the most important subject area is much brighter than the rest of the picture, set the "A" on the Shutter-speed/function Selector from -1 to -2. Examples of this kind of

A: Without adjustment



B: Exposure increased



picture are subjects in a spotlight or shaft of sunlight, or against a very dark background, as Examples C and D, unless the background occupies only a small area in the image frame.

3. As above, when copying documents printed on white stock or other subjects that are predominantly light in color, an adjustment

to $+1/2$ or more may be called for. Similarly, you will probably want to make an adjustment from -1 to -2 for predominantly dark copy meter or that on a dark background.

4. The above suggestions will serve as starting points for trial; individual conditions and taste will of course determine exact final exposure.

C: Without adjustment




D: Exposure decreased



MANUAL EXPOSURE CONTROL


In situations where the contrast difference between the subject area and the background exceeds the available range of automatic exposure compensation, or when a desired photographic effect requires a fixed speed, you will want to use the XG's manual shutter speed.

1. While depressing the Auto-setting release if from the "A" setting, turn the shutter-speed/function selector to align a stepped speed with the index. Any shutter-speed and

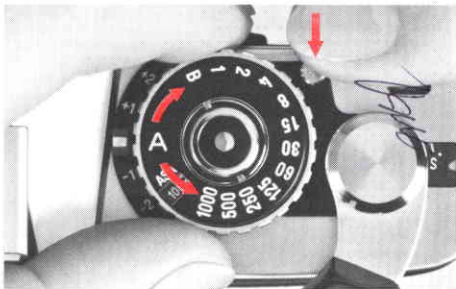

lens-aperture combination may then be set for full manual operation.

2. To determine the aperture and shutter speed settings by using the XG's metering system, move the shutter-speed/function selector to the "A" (Auto) setting. Then adjust the lens aperture for the desired shutter speed and aperture combination. After noting the shutter speed indicated by a lighted LED, reposition the selector to that manual speed and take the picture.

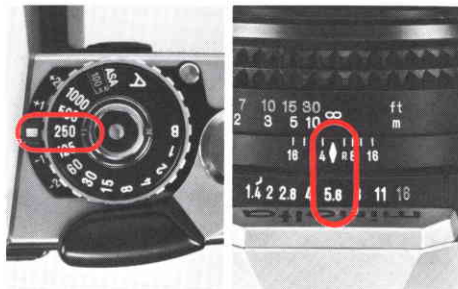


"B" setting

Turning the shutter-speed/function selector to align "B" with the index (while depressing the Auto-setting release if from "A" setting) sets the camera for making "bulb" exposures. That is, the shutter will open when the operating button is depressed and remain open until it is released.

NOTE

When a standard cable release with the XG and "B" setting, be sure not to let any metal part of the release touch any metal part of the camera body while the shutter is open as this will cause the shutter to close and end the exposure.

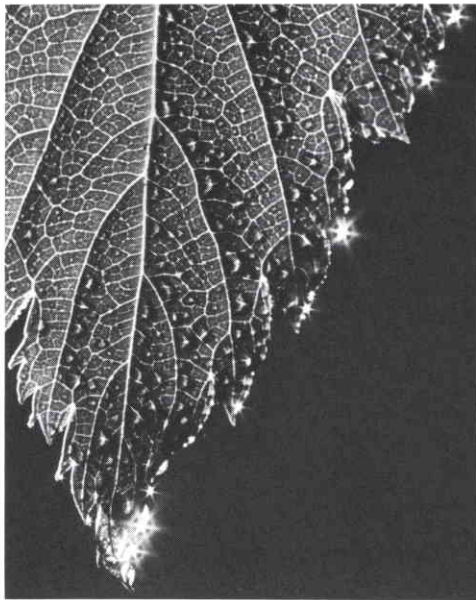

HOLDING THE CAMERA

Holding the camera securely when exposures are made is as important as focusing. Even slight movement at the instant of exposure can result in "blurred" photographs, especially when operating with slow shutter speeds. A recommendable way that permits ready operation of important controls is shown here.

To hold the camera horizontally, cradle the bottom in the palm of the left hand with the thumb and index or middle finger on the focusing grip of the lens. These fingers can also be used to turn the aperture ring. Grasp the camera body firmly with the right hand as

shown so that the index finger rests on the operating button. In this position, the thumb can conveniently operate the film-advance lever.

The camera may be held in a vertical position as shown (center) using the thumb of the right hand to push the shutter release while the left hand is used for support and focusing. Another possibility is to rotate the camera from the horizontal position and hold it so that the rewind-crank end is cradled in the left hand as shown.



The focusing screen of your XG-9 features a split-image spot surrounded by a band of microprisms in the center of an acute matte field.

To focus the camera visually with usual lenses, look through the viewfinder with lens at full aperture and turn the focusing collar on the lens until the upper and lower subject images in the spot are exactly aligned with no broken lines between them and/or the subject image in the band does not shimmer or appear broken up. At this point, the subject image within the focusing aid should appear clearest and seem to blend with that on the matte field around it.

Out of focus



Though the most satisfactory focusing aid and method depend upon the conditions and personal preference of the photographer, the above method may provide the best results with medium wideangle to medium telephoto lenses.

Generally speaking, however, you will probably find that using the split-image spot will provide the easiest way to focus with subjects having vertical lines; the microprism band for lenses from medium wideangle through medium telephoto, especially with subjects not having vertical lines; and the matte field for longer lenses or macro or other work involving considerable lens extension.


Subject in focus



Depth of field

The distance behind and in front of the focused distance within which the image appears acceptably sharp is called the depth of field.

It extends a greater distance behind the focused distance than in front and is determined by three factors: the aperture size, the distance at which the lens is focused, and the focal length of the lens in use. Depth of field

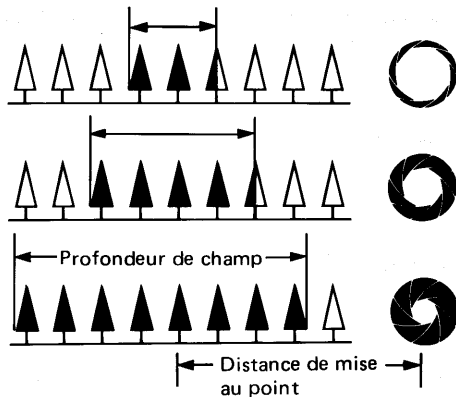

increases as the lens is stopped down (e.g., $f/2$ to $f/16$) and becomes greater the farther from the camera the lens is focused. It decreases as the lens is opened up (e.g., $f/16$ to $f/2$) and the closer to the camera the lens is focused. Depth of field is greater for short focal length lenses than for telephoto's at the same focused distance and aperture. It is at its least for any given lens in normal mounting when the lens is at maximum aperture (as when metering and focusing normally with Minolta MD- or MC-type lenses) and at minimum focusing distance.

Depth-of-field preview

Depth of field at any aperture and focusing distance can be previewed visually by pushing the stop-down button all the way in. This will stop the diaphragm down to the aperture corresponding to the f-number preset on the aperture ring, allowing you to see through the viewfinder how much of the subject is acceptably sharp.



Depth-of-field scale

The near and far limits of acceptable sharpness can be determined from the depth-of-field scale on the lens barrel. With the lens focused at a given point, the image will be in satisfactory focus from the nearer value to the farther value on the distance scale indicated by the depth-of-field scale marks for the aperture to be used.

For example, if a 50mm lens is focused at 5m (about 16 ft.) and the aperture is f/8, the appropriate graduations to left and right of the index on the depth-of-field scale indicate acceptable sharpness from about 3.4m to 9.7m (approx. 11 to 32 ft.).

Infrared index

For proper focus when making pictures with infrared radiation, first focus your subject with visible light as described above, then attach a red filter and turn the focusing ring to the right to align the point of proper focus on the distance scale with the index designated with small red "R" in the depth-of-field scale. When making color pictures, follow the manufacturer's recommendations to set focus.

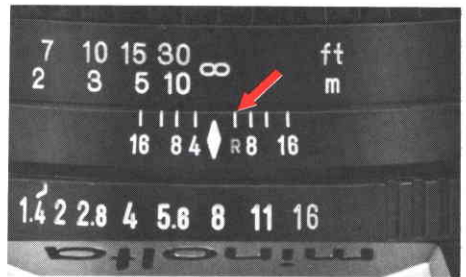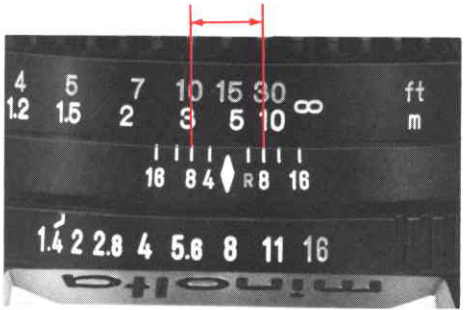

The way the camera is supported (see p. 34) when exposures are made and how the shutter is released are as important as focusing for best-photographic results, and to avoid blurred pictures due to camera movement during exposure these factors become more critical the slower the shutter speed.


You may wish to use the figure "60" on the shutter-speed scale as the reference point to gauge the chance of camera movement. When the LED lights below it, you should pay special attention to both camera and subject movement in taking pictures.

With the possible exception of highest speeds, the camera or hands holding it should generally be firmly steadied against your face or body when you release the shutter.

At slower speeds, it is advisable to steady the camera against a doorframe, post, or other firm support while depressing the release.

The shutter should always be released with a slow, steady squeeze — never a quick jab — preferable while holding your breath.



DANGER OF BLUR FROM CAMERA/SUBJECT MOVEMENT

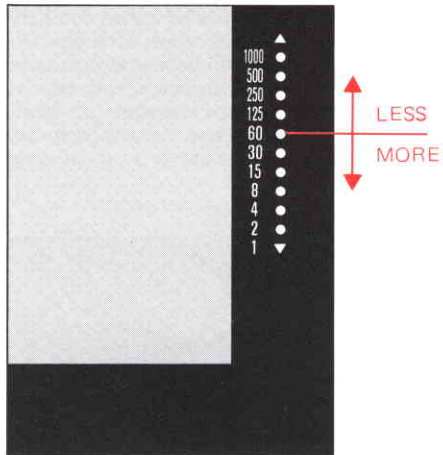

For maximum sharpness when making exposures too long to permit hand-holding the camera, mount it on a tripod using the built-in socket on the bottom and trip the shutter with a Minolta electronic Remote Cord or a standard cable release screwed into the threaded socket

provided on the side of the lens mount.

If the eyepiece is not being shielded by the photographer's head when the shutter is released in this way, the eyepiece cap should be used (see p. 25).

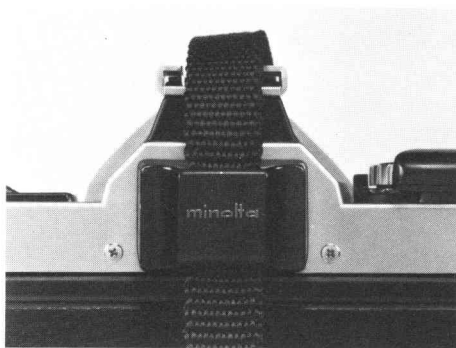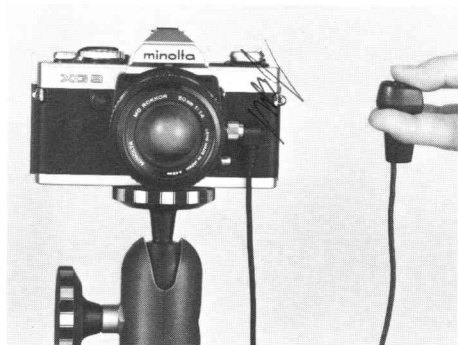


SELF-TIMER

The electronic self-timer built into your XG-9 can be used to delay release of the shutter for about 10 seconds after actuation.

To operate it:

1. Advance the film.
2. With the shutter-speed/function selector at a setting other than "B," move the main switch to align the index with SELF-TIMER.
3. Depress the operating button. The blinking light on the front of the camera will indicate the delay has been started. Approximately 2.5 secs. before the exposure is made, the

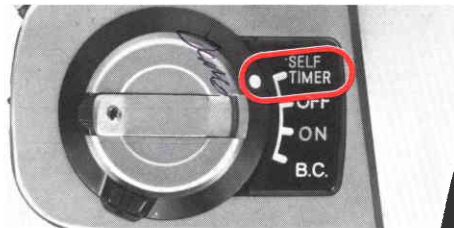


indicator will blink faster to signal the end of the delay. You may cancel the self-timer by moving the main switch to "OFF".

NOTE

- After using the self-timer be sure to move the main switch from the "SELF-TIMER" setting.
- In automatic mode, the self-timer will cancel if exposure conditions exceed the upper range of the metering system. Operation will resume when aperture or other conditions are adjusted so that exposure conditions are within metering range.



1. Push the rewind button.

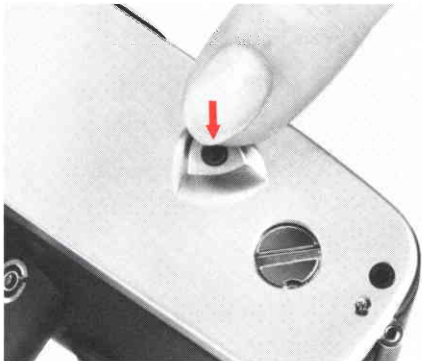

2. Unfold the rewind crank and turn it in the direction indicated by the arrow on it until the red Safe Load Signal bar moves out of the window to the left. You will then feel tension on the film increase and disappear, and the crank will turn freely.



3. When you are certain that the film is completely rewound, pull out the backcover release knob to open the back and remove the cartridge.



Synchronization

Your XG-9 has shutter contacts for X flash synchronization as follows:

Type of flash	Synchronized speed range in seconds
	On manual mode (step speeds)
Electronic flash ("strobe")	1 through 1/60, B
Class M or MF flashbulbs	1 through 1/15, B
Class FP flashbulbs	1 through 1/15, B

NOTE

As indicated by the table, 1/60 is the maximum shutter speed for proper X synchronization. Slower speeds can also be used under certain conditions if desired for particular effects. Be sure not to use speeds faster than 1/60, (i.e. 1/125 and upward) with electronic or auto-flash units.

Connecting flash units

Cordless clip-on flash units such as the Auto Electroflash 200X are attached and electrically connected by simply sliding them into the camera's hot shoe. Sync. cords of either clip-on or bracket-type conventional units requiring them must be plugged into the camera's sync. terminal for operation.

Bracket-type flash units are attached to the camera by means of its tripod socket.



USING OTHER THAN MD OR MC LENSES

Metering and exposure with Auto Rokkor lenses having built in preview buttons, RF lens (reflex-mirror type), and Manual-Preset lenses are by the stop-down method as follows:

Auto Rokkor lenses

1. After focusing, depress the preview button to stop down the aperture.



2. With the shutter-speed/function selector set at "A," select an aperture as explained on pp. 24 through 25. The viewfinder field will darken as the lens is stopped down, and the split-image spot and microprism band may become unusable due to darkening.
3. With the lens stopped down to the proper taking aperture or with the camera set for manual operation, release the shutter.

RF (mirror-type) and Manual-preset lenses

Proceed as for Auto Rokkors above, except that use of a stop-down button is not necessary as metering and exposure are always made at taking aperture.

NOTE

Because they have neither meter coupling nor preview buttons, the 35mm f/2.8 Shift CA lens, Auto Bellows I, and some Auto Rokkor lenses can not be used with the XG-9 on auto mode.

Auto winder G



The Auto Winder G is an automatic film winder that helps the photographer focus his full attention on the creative aspects of photography by removing the interruption of having to wind the film after each picture. Attaching is quick and easy with no access caps to remove or store. Just a light touch of the shutter release is all that is required to take either successive or single frames with the winder automatically advancing the film after each one. The winder drive mechanism stops automatically at the end of each cartridge and film can be easily re-wound with winder attached.

All of these features combine with the XG-9 to help you to capture the fast paced action of a sports car race or the fleeting expressions of a child at play.

Auto Electroflash 200X and 132X



Both the Auto Electroflash 200X and 132X are new generation automatic-type flash units that have been specially designed for use with the XG-9 camera system.

After either Electroflash is attached, all you need to do is select any automatic setting or manual shutter speed, set the proper lens aperture, and turn the flash on. When its capacitor is fully charged, the unit starts a flash-ready signal blinking in the viewfinder and electronically switches the camera to X-sync. when the shutter is released.

While the capacitor of either unit is charging and the monitor lamp is off, the flash will automatically switch the camera's shutter back to its indicated setting. At this time metered automatic or full manual exposures can be made. Flash mode will resume when the capacitor is charged and the flash-ready signal blinks.


The Auto Electroflash 132X features two auto setting as well as manual and a tiltable flash head for bounce flash. Its special flash distance check lamp lights to indicate when flash brightness is sufficient for correct exposure.

The series-SCR circuit in the Auto Electroflash 200X ensures fast recycle time (min. 0.5 sec.) and enables the unit, powered by Ni-Cd batteries to make up to two continuous-sequence flash exposures each second with the Auto Winder G.


For both units, switching the power "OFF" cuts off all flash circuits and normal automatic or manual operation is returned to the XG-9. The camera may then be used in either mode even with the flash attached.

Remote Cord S and L

These cords are designed for operating the XG-9 from a distance. Each screws into the shutter release socket on the side of the lens mount. The Cord S is 50cm (about 20 in.) long, while the Cord L is 5m (16-1/2 ft.). These cords facilitate shots mounted on a tripod or remote wildlife pictures. In combination with the Auto Winder G, the Cord L can be used to make single or continuous sequence exposures at the subject position, from a remote location, etc.

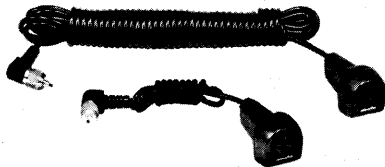

Data Back G

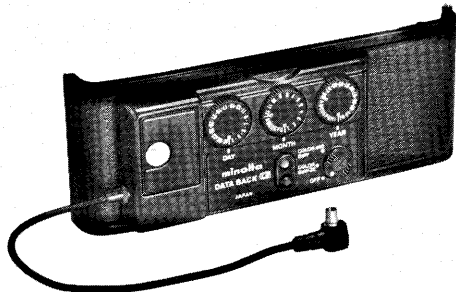

This convenient accessory imprints the date or other useful data on the film as the exposure is made to help identify or classify your pictures. It attaches in place of your XG-9's removable regular back cover and synchronizes with the shutter by means of a cord which is inserted into the camera's sync. terminal. Three large dials set numbered day, month and year indications which appear in reverse order on the bottom right corner of the picture. The ability to set letters and blank spaces further increases the data back's usefulness for scientific and other purposes. A red LED which also operates as a battery check, lights to signal when data is imprinting. Data-exposure intensity can be adjusted for either normal or high-speed black-and-white or color film. Power is provided by two tiny silver-oxide cells.

STANDARD LENS SPECIFICATIONS

Lens:	45mm f/2 MD	50mm f/1.7 MD	50mm f/1.4 MD	50mm f/1.2 MD
Type:	Modified Gauss-type standard lens			
Construction:	6 elements in 5 groups	6 elements in 5 groups	7 elements in 6 groups	7 elements in 6 groups
Angle of view:	51°	47°		
Coating:	Single	Minolta Achromatic		
Min. focusing dist.:	0.6m (2 ft.)	0.45m (1.48 ft.)		
Diaphragm:	Fully automatic, meter-coupled			
Aperture scale:	2, 2.8, 4, 5.6, 8, 11, 16	1.7, 2.8, 4, 5.6, 8, 11, 16	1.4, 2, 2.8, 4, 5.6, 8, 11, 16	1.2, 2, 2.8, 4, 5.6, 8, 11, 16
	Each with full and half-click-stops			
Filter thread diam.:	49mm	49mm	49mm	55mm
Dimensions:	φ64mm x 30.5mm (φ2-1/2" x 1-3/16")	φ64mm x 36mm (φ2-1/2" x 1-7/16")	φ64mm x 40mm (φ2-1/2" x 1-9/16")	φ65.5mm x 46.5mm (φ2-9/16" x 1-13/16")
Weight:	125g (4-7/16 oz.)	160g (5-5/8 oz.)	220g (7-3/4 oz.)	315g (11-1/8 oz.)

SPECIFICATIONS

- Type:** Compact 35mm single-lens reflex with automatic and full manual exposure control
- Lens mount:** Minolta SLR bayonet, 54° rotating angle; coupling for full-aperture-metering and automatic diaphragm control with Minolta MD and MC lenses (Standard lenses MD 50mm f/1.2, f/1.4, f/1.7 or 45mm f/2; see p. 49 for specifications)
- Auto-exposure control:** Special low-voltage, low-current computer circuit, actuated by contact or pressure on "touch switch" operating button, varies the shutter speed continuously and steplessly to yield proper exposure according to metering system indication at the aperture, film speed, and exposure adjustment set
Auto-exposure range: EV 2 to EV 17 (e.g., 1/2 sec. at f/1.4 to 1/1000 at f/11) at ASA 100 with f/1.4 lens
- Shutter:** Horizontal-traverse focal-plane type; electronically controlled speeds; 1/1000 to 1 sec., steplessly on automatic mode or in steps on manual mode
- Metering:** Full-aperture TTL center-weighted type by two CdS cells mounted on either side of the eyepiece at the rear-of the pentaprism
- Film-speed range:** ASA 25 to 1600 set on the shutter-speed/function selector
- Auto-exposure adjustment:** Up to ±2 EV continuous adjustment of automatic exposure with 1/2 EV click-stops and lock at "A" (zero setting)
- Mirror:** Oversize quick-return type (P0 value: 123mm)
- Viewfinder:** Eye-level fixed pentaprism type showing 93% of 24 x 36mm film-frame area
Magnification: 0.9X with 50mm standard lens focused at infinity;
Power: -1D, variable with accessory snap-on eyepiece correction lenses.
Fresnel-field focusing screen having an artificially regular patterned matte field plus central split-image horizontally oriented focusing spot surrounded by microprism band

Visible in finder: stepless speeds indicated by 10 light-emitting diodes; LED over-/under-range indicators; LED at "60" position also blinks as flash-ready signal with Auto Electroflash 200X and 132X; f-number set for automatic and manual modes

Flash sync.: PC terminal and hot shoe for X sync. (disconnected when unit no installed): Electronic flash synchronizes at 1/60 sec. and slower step or stepless speeds; Class MF, M and FP flashbulbs synchronize at 1/15 or slower speeds. Extra contact on hot shoe receives signal from camera-control contact of Auto Electroflash 200X and 132X

Film advance: Motorized: Through built-in coupler key with accessory Auto Winder G
Manual: By lever with single 130° stroke after 30° unengaged movement
Film-advance release button for rewinding; advancing-type frame counter and Safe Load Signal that indicates film loading and advancing conditions

Power: Two 1.5v silver-oxide cells contained in camera base power both auto exposure control and shutter's electronically governed operation
LED battery check indicator lights when operating switch in battery check position

Shutter will not release when voltage too low for proper operation

Self-timer: Electronic, LED indicated types; approximately 10 sec. delay

Other: 4-slot take-up spool; detachable back cover with memo holder and ASA-DIN conversion scale

Size and weight: 52 x 88 x 138mm (2 x 3-7/16 x 5-5/8 in.)
500g (17-5/8 oz.) without lens and power cells

Accessories: Exclusive Auto Winder G, Auto Electroflash 200X and 132X, Data Back G, Remote Cord S 50cm (20-in.) and Remote Cord L 5m (16-ft.); MD, MC, and other interchangeable Minolta lenses and applicable Minolta SLR system accessories

CARE AND STORAGE

- As with all high-precision instruments, no part of your XG-9 should ever be forced at any time. If operation is not as you think it should be, carefully restudy the applicable instructions or consult an authorized Minolta service representative.
- Always keep your camera in its case with the lens capped when not in use.
- Never subject your camera to shock, high heat and/or humidity, water, or harmful chemicals or gases.
- Never lubricate any part of the body or lens.
- Always use a body cap when a lens is not installed on the body. Keep lenses, properly capped front and rear, in their cases when not in use.
- Never touch the shutter curtains or anything inside the front of the body with the fingers. These parts and the inside of the back should be dusted with a soft brush from time to time as necessary, with particular care never to exert pressure on the shutter curtains.
- Never touch lens or other glass surfaces with the fingers. If necessary, remove loose matter from them with a blower lens brush. Use special photographic lens tissue or a soft clean cloth to remove smudges or fingerprints with a gentle circular motion. Only if absolutely necessary, the tissue may be moistened very slightly with not more than one drop of a satisfactory quick-evaporating fluid cleaner specially compounded for photographic lenses. Such fluids must never be dropped directly on the glass surface.
- Smudges or fingerprints on the mirror may be removed with lens tissue slightly moistened with lens-cleaning fluid as above.
- External camera and lense-barrel — but not glass — surfaces may be wiped with a soft, silicone-treated cloth.
- Never leave the shutter cocked when the camera is to be stored overnight or longer. It is advisable to operate the film advance and release the shutter once or twice from time to time during extended storage.

- If the camera is not to be used for more than two weeks, the batteries should be removed.
- If the camera is to be stored for a long period of time, body and lens should be

returned to their original packing and kept in a cool, dry place away from dust or chemicals, preferably in an airtight container with a drying agent such as silica gel.

Specifications subject to change without notice.

Minolta Camera Co., Ltd.	30, 2-Chome, Azuchi-Machi, Higashi-Ku, Osaka 541, Japan
Minolta Corporation	
Head Office	101 Williams Drive, Ramsey, New Jersey 07446, U.S.A.
Los Angeles Branch	3105 Lomita Boulevard, Torrance, CA 90505, U.S.A.
Chicago Branch	3000 Tollview Drive, Rolling Meadows, IL 60008, U.S.A.
Atlanta Branch	5904 Peachtree Corners East, Norcross, GA 30071, U.S.A.
Minolta Canada Inc.	
Head Office	1344 Fewster Drive, Mississauga, Ontario L4W 1A4, Canada
Montreal Branch	7575 Trans Canada Hwy., Montreal, Quebec, H4T 1V6, Canada
Vancouver Branch	1620 W. 6th Avenue, Vancouver, B.C., V6J1R3, Canada
Minolta Camera Handels- gesellschaft m.b.H.	Kurt-Fischer Strasse 50, D-2070 Ahrensburg, West Germany
Minolta France S.A.	357 bis, rue d'Estienne d'Orves 92700 Colombes, France
Minolta Vertriebsgesellschaft m.b.H.	Seidengasse 19, A-1072 Wien, Austria
Minolta Nederland B.V.	Groen van Prinstererlaan, 1181 TS, Amstelveen, Nederland
Minolta (Schweiz) GmbH	Riedhof V, Riedstrasse 6, 8953 Dietikon-Zurich, Switzerland
Minolta Hong Kong Limited	49 Chatham Road, Kowloon, Hong Kong
Minolta Singapore (Pte) Ltd.	Chin Swee Tower, 52, Chin Swee Road, Singapore 3