



- S 101.701
 S 101.702
 S 101.703
 S 101.704
 S 101.705

INPUT IMPEDANCE (1.0KΩ, 2.0KΩ, 3.0KΩ)
 PHONO (1. PHONO - 1.2, PHONO - 2, 3, AUX - 1, 4, AUX - 2, 5, AUX - 3)
 MODE (1, 2, R, 3, 4, R, STEREO S, REVERSE)
 MONITOR (1, OFF, 2, ON)
 TAPE MONITOR SELECTOR (1 TAPE - 2, TAPE - 1)

- S 300.100
 S 301.100
 S 300.100
 S 300.100
 S 300.100

LOW CUT FILTER (1, OFF, 2, ON)
 HIGH CUT FILTER (1, OFF, 2, ON)
 LOW BOOST (1, OFF, 2, ON)
 TWE - MAIN (NORMAL, 2, SEPARATE)
 ATTENUATOR (1, OFF, 2, ON)

- S 300.100
 S 301.100
 S 401
 S 401

MAIN SPEAKER (1, ON, 2, OFF)
 REMOTE SPEAKER (1, ON, 2, OFF)
 BASS (1, REPEAT, 2, 150Hz, 3, 300Hz, 4, 500Hz)
 TREBLE (1, OFF, 2, 2.0KHz, 3, 3.0KHz, 4, 5.0KHz)

- VR 101.101
 VR 102.101
 VR 103.101
 VR 401
 VR 402

VOLUME CONT.
 BALANCE CONT.
 AUX - 1 LEVEL SET
 BASS CONT.
 TREBLE CONT.

UNLESS OTHERWISE SPECIFIED, ALL RESISTORS ARE IN OHMS - 10%, 1/4W. ALL CAPACITORS ARE IN FARAD, THERE MAY BE SEVERAL CHANGES IN THE ACTUAL SET. USE VOLTAGE SELECTOR'S POSITION

