



For more Hi-Fi manuals and set-up information please visit www.hifiengine.com

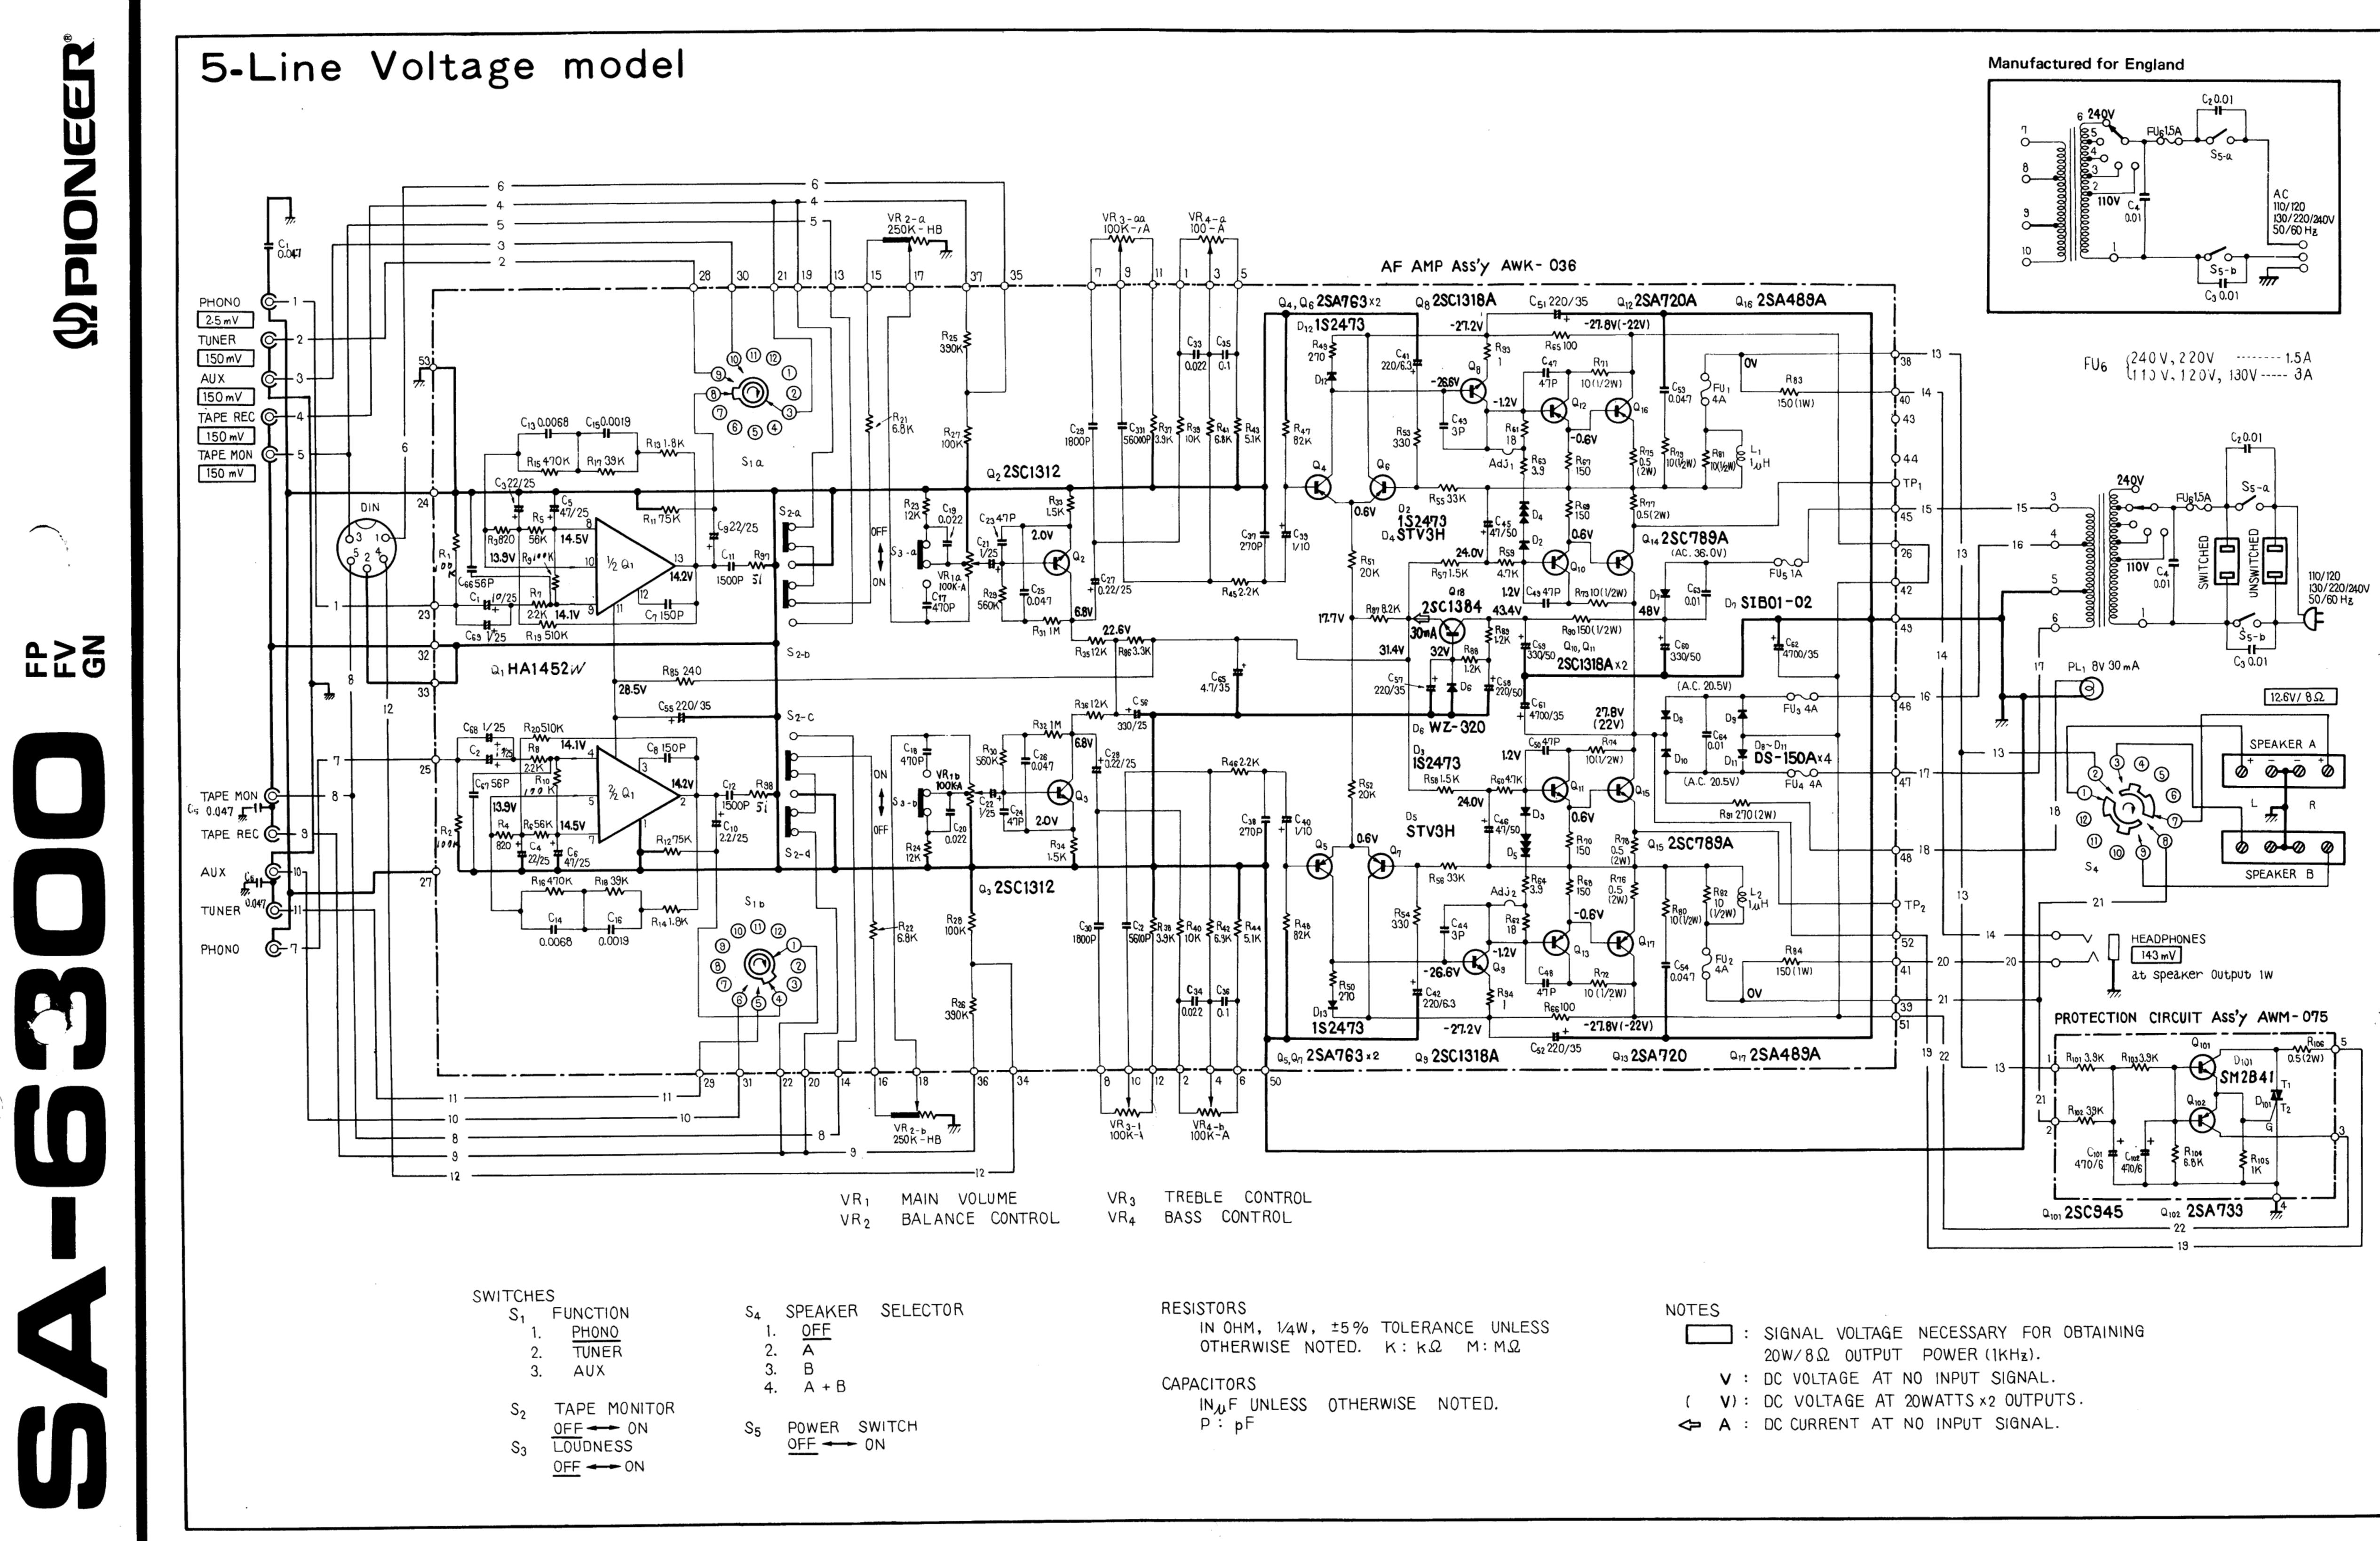

UNCTION <u>PHONO</u> TUNER AUX	S ₄ SPEAKER SELECTOR 1. <u>OFF</u> 2. A 3. B 4. A + B	RESIS
APE MONITOR FF ON OUDNESS FF ON	S5 POWER SWITCH OFF ON	

•

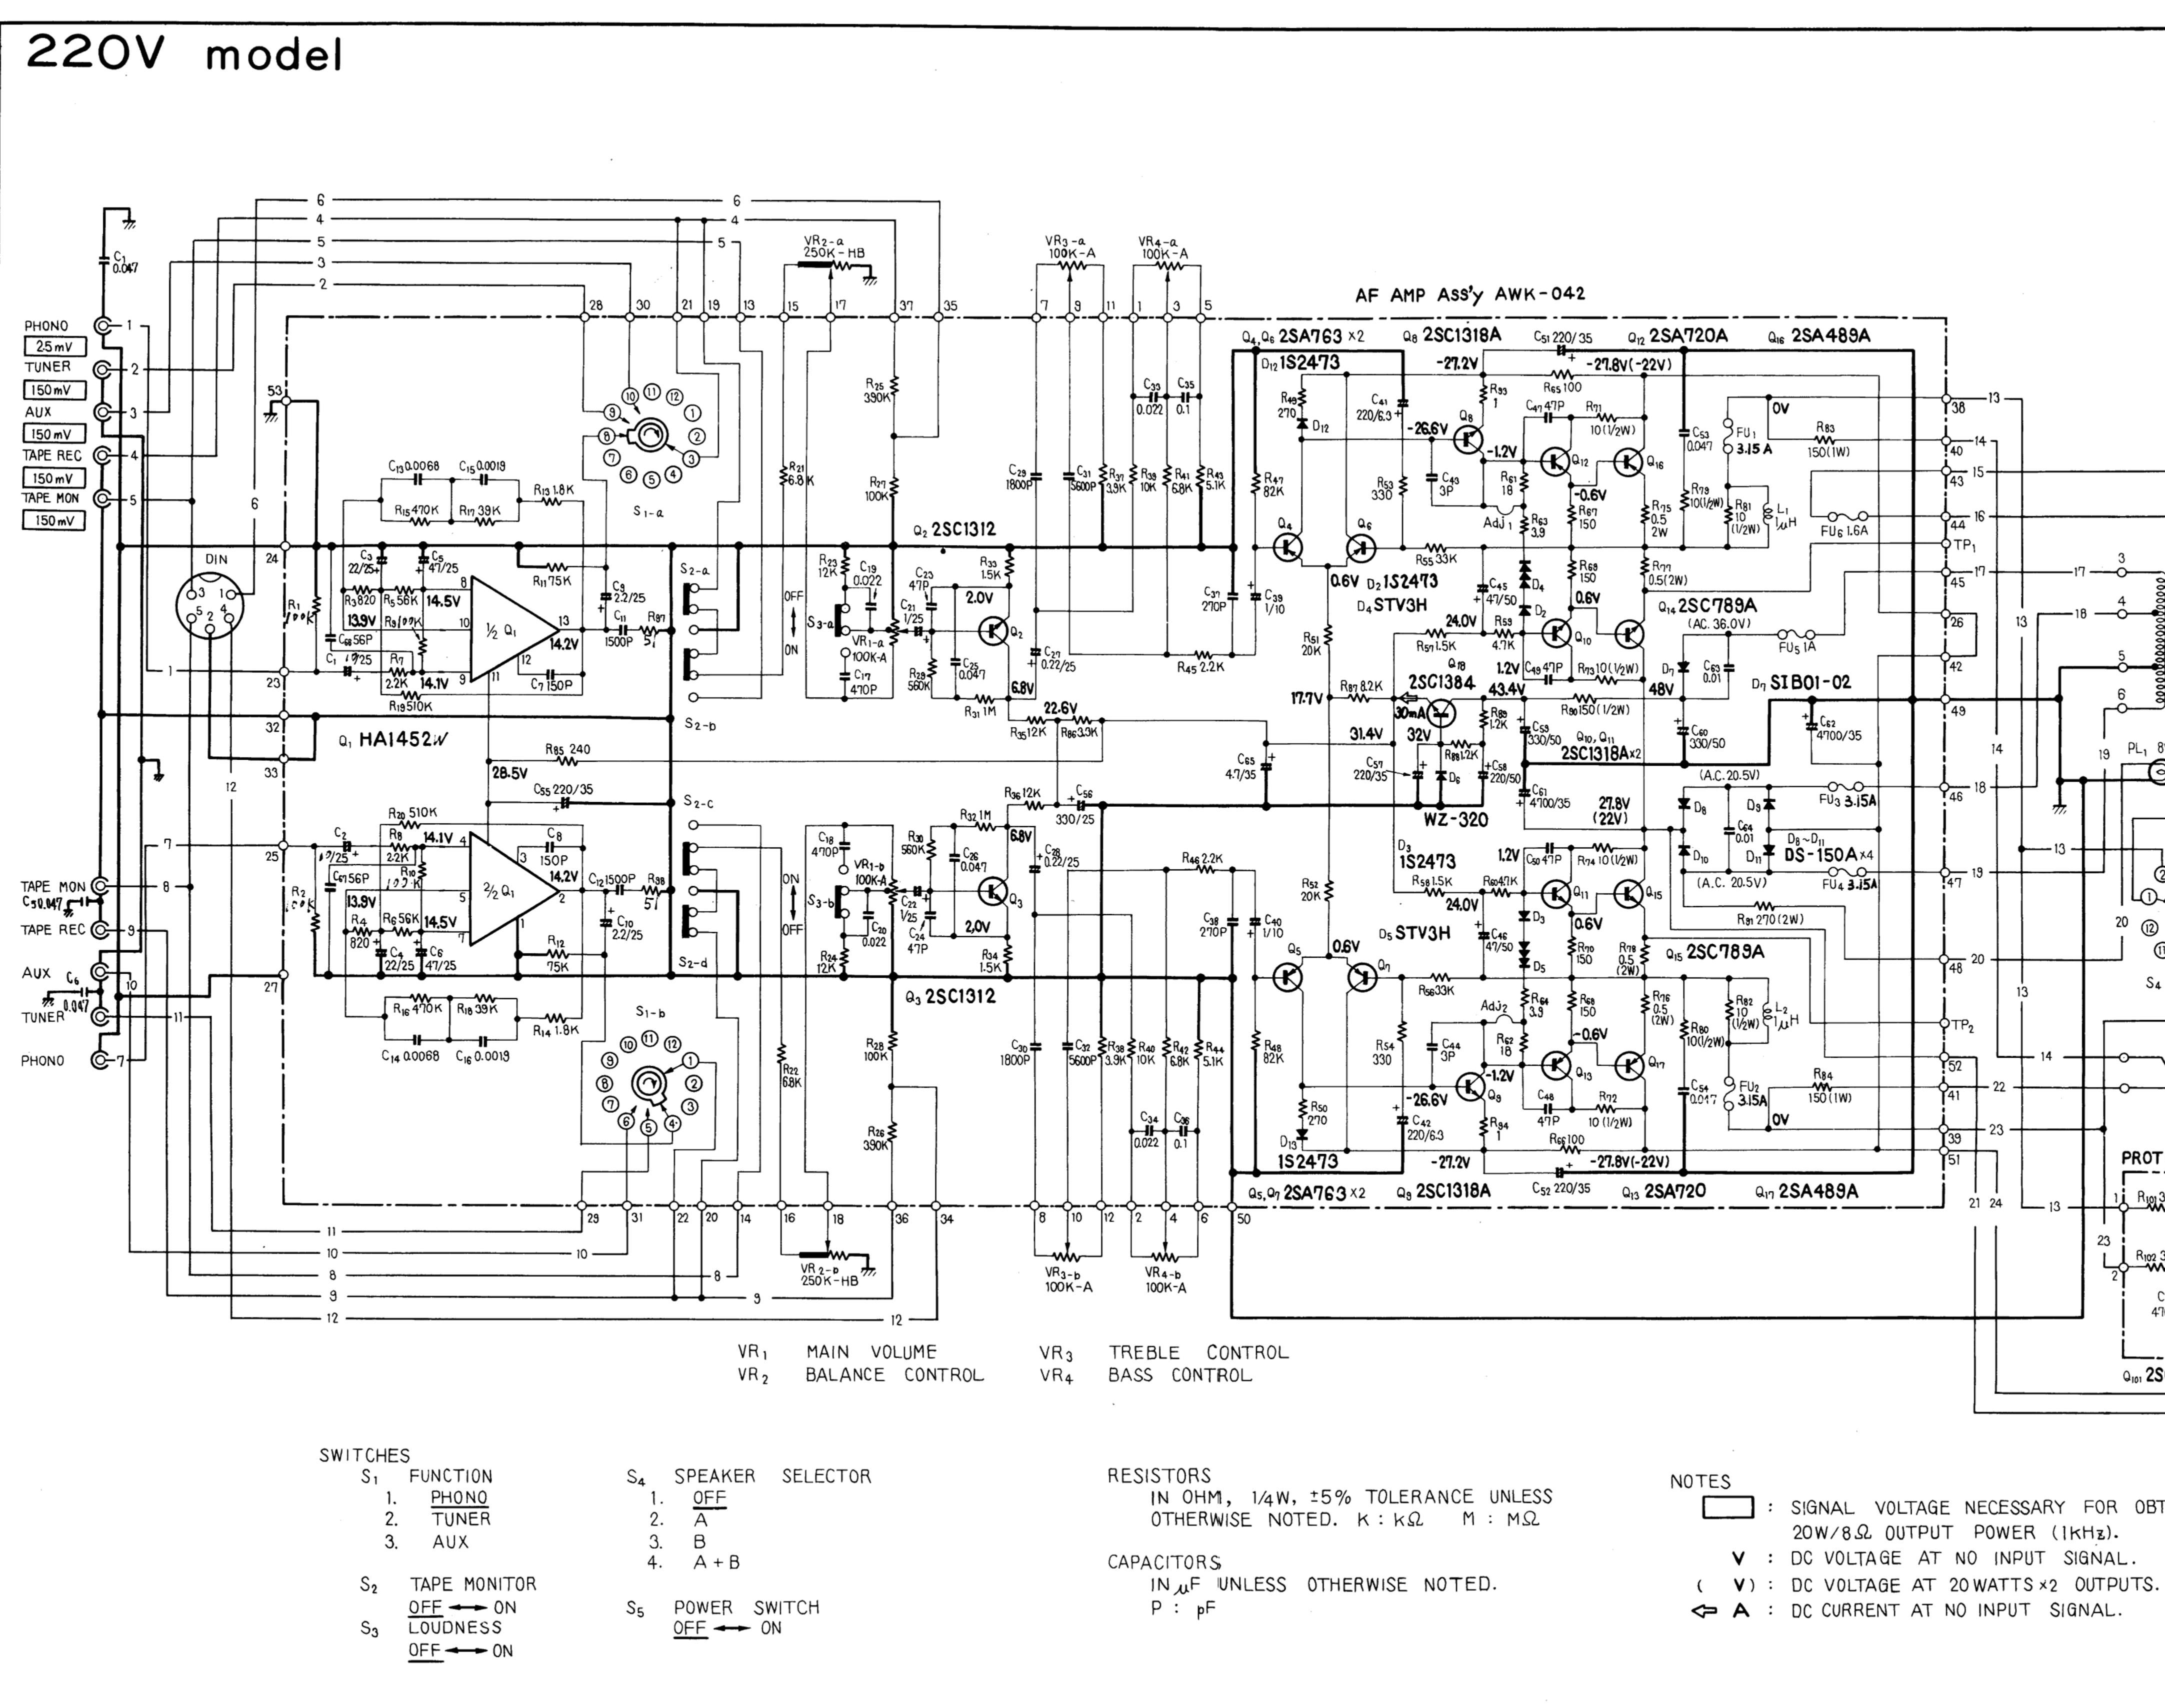

44 S5-a 26 AC 220V 50/60 Hz 모 **T**42 49 S5-d PL1 8V 30 mA (9 12.6V/8S2 -9_{46} \overline{T} SPEAKER A <u>(</u>4) 0+0 47 ₩. 0+0 (1) (3) $-0_{\overline{48}}^{-20}$ SPEAKER B S4 HEADPHONES 52 143 mV at speaker output 1w 39 PROTECTION CIRCUIT ASS'Y AWM-075 0.5(2W) - R 101 3.9K R 103 3.9K D101 0' SM2B41 21 24 R102 39K 6.8K 470/6 470/6 Q102 2SA733 Q₁₀₁ 2SC945

: SIGNAL VOLTAGE NECESSARY FOR OBTAINING 20W/82 OUTPUT POWER (IKHz). ✓ : DC VOLTAGE AT NO INPUT SIGNAL.