 


WARNING: Parts marked with this symbol have critical characteristics. Use ONLY replacement parts recommended by the manufacturer.

CAUTION: Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 milliamps, or if the resistance from ohms, the unit is defective.

package current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 milliamps, or if the resistance from ohms, the unit is defective.



NOTES: ALL RESISTANCE VALUES IN OHM K = 1,000 OHM M = 1,000,000 OHM ALL CAPACITANCE VALUES IN MICRO FARAD P = MICRO-MICRO FARAD EACH VOLTAGE AND CURRENT ARE MEASURED AT NO SIGNAL INPUT CONDITION. CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.